

Product Statement : (a)Helmet is main product, passed some regulations safety test, like CNS, DOT, ECE... (b)Visor is add-on parts, easy to setup, passed CE, RoHS, IPX5

一, Cam-Helmets



SD card

Power

Batteries

Low Battery

USB socket
(Option)

Power light
(Green)

Photography
(Blue)

RESET

LED
Butto

二, Cam / Wiper Helmets



Viso



Red button

Power

Green
button

Wiper
butto

Top of
Wiper-arm

Arrow
direction

LED light
button

Camcorder operation : A. Set SD card(speed C10) into socket, Press the rubber cover to flat (the high same the wall) B. Install 4 batteries

C. Power on : (1)The Green power light brightening, (2) The Blue light continuous flashing for recording, included charge light(Red) bright or non-bright, it is no problem

D. When "LOW BATTERY" indicator light bright, must be updated batteries within 30 min. if you want to continuous to use.

Remarks : When power on, the Blue light doesn't flash, it is un-normal, please check (1)SD card and Batteries setting (2)Power off then press "RESET" button then Power on again. (3)when turn off the power, the blue light will be delayed 10 sec. to extinguish.

Option : USB power connector, attached USB cable and adapter, connected to DC 5 volts or 110 / 220 volts, when use the USB connector should take out the AA battery.

★ Turn off the power please wait for 10 sec. for sure all lights been extinguished
If some lights didn't extinguished, please press the RESET button to finished.

Wiper operation :

A. Power on : hear the "Beep" sound and power light bright(Green)
B. Red button(Continuous mode) : Continual swing and press any button to stop.

C. Green button(Intermittent mode) : Swing once of every 4 seconds and press any button to stop

E. Change Wiper-blade, press wiper-arm frame tip point and squeeze both sides to take out blade

F. Install the blade, make sure indicator arrow-head of blade to down position, then insert the blade to the frame of wiper-arm