

User's Guide 使用手冊

1. Check List


清點配件



Helmet × 1
安全帽 × 1



Wiper Module × 1
雨刷模組 × 1

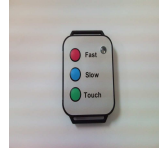

Remote Control × 1
遙控器 × 1



Remote Control Holder × 1
遙控器底座 × 1



Removable Holding Strip × 1
可拆式固定帶 × 1



Long Screw × 2
長螺絲 × 2



AA Batteries × 4
AA 電池 × 4



Spare Wiper Blade × 1
備用雨刷條 × 1



Special Screw Driver × 1
專用螺絲起子 × 1

For Long Screw
長螺絲使用

For Short Screw
短螺絲使用

2. Attach Your Wiper Module

安裝步驟



First Step : Use the special screw driver to remove the short screw with Oring from both side of shield pivot
第一步：使用專用螺絲起子由面罩兩側鎖孔將短螺絲卸下




Caution : Make sure the Oring stay with short screw
注意：確認O型環仍套在短螺絲上



Second Step : Remove the batteries cover from both sides
第二步：將兩側電池蓋打開



Third Step : Attach the Wiper Module on top of the helmet
第三步：將兩刷模組與安全帽接合

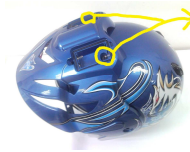

Fourth Step : Tie the top screw for both side first
第四步：將短螺絲分別鎖住兩側上方鎖孔



Fifth Step : Long Srew for the both sides of shield pivot
第五步：將長螺絲鎖在兩側的面罩鎖孔



Sixth Step : Install the Batteries
第六步：裝入電池



Seventh Step : Put battery cover
第七步：蓋上電池蓋



Eighth Step : Turn on the power and full close the shield
第八步：打開開關並將面罩完全蓋下

Final : Indicator Light trun on and hear beep soud please enjoy the clear visibility in the rain
最後：接收器紅燈亮起及嗶聲提示請盡情享受清晰的雨中視線

3. Use Remote

使用遙控器



Solution 1 : Use the back sticker and attach it close to the other switch on handlebar
方法一：將底座黏在手把開關旁邊



Put remote into the holder when riding and attach it after park
使用時將遙控器放在底座內，停車後取下



Solution 2 : Use the strip and tie beside other switch by handlebar
方法二：使用固定帶把遙控器綁在手把開關旁

4. Change Wiper Blade

更換雨刷條



Step 1 : Lift up from the tip of wiper blade
第一步：從兩刷條前端向上提高



Step 2 : Squeeze both side and remove wiper blade from pivot
第二步：從此處兩側向內輕壓即可取下兩刷條



After remove the wiper blade
兩刷條取下後的兩刷臂



Take the new wiper blade and make sure indicator arrow head down
取出新的雨刷頭並將指示箭頭朝下



Step 3 : Install new blade from pivot
第四步：將新刷條的中間支柱插入兩邊接點

5. Operate

操作說明



Fast :
continual swip and press any button to stop
連續刷動
按任一按鍵即可停止

Slow :
swip once every 4 seconds and press any button to stop
每四秒刷動一次 按任一按鍵即可停止

Touch :
one touch one swip
按一次刷一次

Remark :

- ◎When wiper do not swip properly, we suggest to replace batteries
- ◎We suggest remove the batteries when not use

◎兩刷刷動不完整時，建議更換電池

◎不使用時，建議將電池卸下